

Configuration interne PVS - PGA

Nombre de BP	codification switch CPU Sooneboard								Codification et position des CPU 4 BP											
									N° 1				N° 2				N° 3			
	1	2	3	4	5	6	7	8	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	ON	OFF
1	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	A											
2	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	A											
4	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF	A											
6	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF	B				A							
8	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF	B				A							
10	OFF	OFF	ON	OFF	ON	OFF	OFF	OFF	C				B				A			
12	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF	C				B				A			

CPU SOONEBOARD

CPU 4BP
Position A

CPU 4BP
Position B

CPU 4BP
Position C

